



Make sure that the camera and the PC are connected to the local network.

Install IP-Tool from the CD and run it after installation.

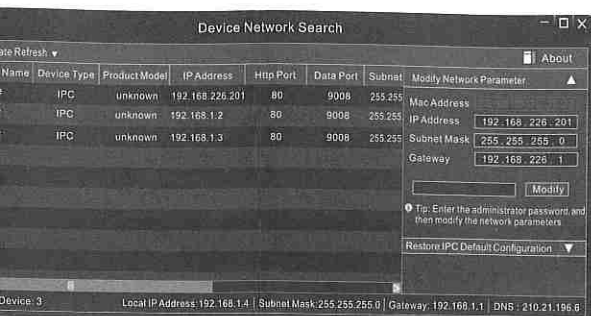

Modify the IP address. The default IP address of this camera is 192.168.226.201. Click the information of the camera listed in the table to show the network information on the right hand.

Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as the computer's. Please modify the IP address of your device according to the practical situation.

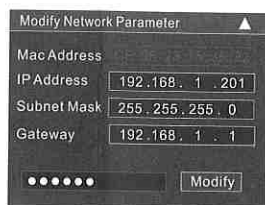


For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X. After modification, please enter the password of the administrator and click "Modify" button to modify the setting.

The default password of the administrator is "123456".

Double-click the IP address and then the system will pop up the web browser to connect IP-CAM. Follow directions to download and run the plugin in the computer. Then enter the user name and password in the login interface.

⚠ The default username is **admin**; the default password is **123456**.

● Direct Access Through WEB Browser

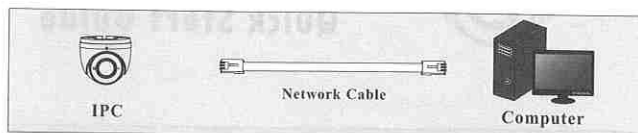


The default network settings are as shown below:

IP address: 192.168.226.201 HTTP:80
 Subnet Mask: 255.255.255.0 Data Port:9008
 Gateway: 192.168.226.1

You may use the above default settings when you log in the camera for the first time.

① Set the IP address of the PC and make sure the network segment should be as the same as the default settings of IP-CAM. Open the network and share center. Click "Local Area Connection" to pop up the following window. Select "Properties" and then select Internet protocol according to the actual situation (for example: IPv4). Next, click "Properties" button to set the network of the PC.

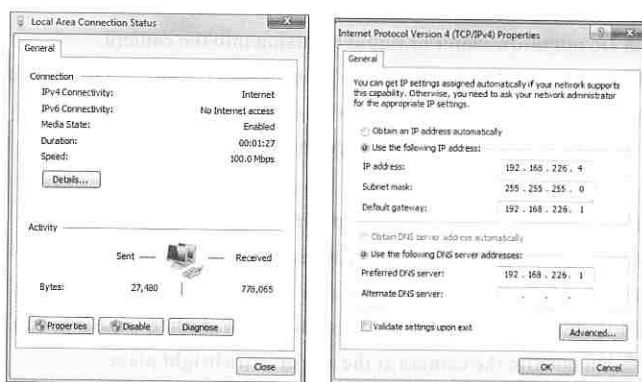

- ② Open a browser and enter the default address of IP-CAM and confirm.
- ③ Download and run the plugin in the computer.
- ④ Enter the default username and password in the login interface to log in.