

Reset Password NVR Vizo

Procedura da Monitor Locale

11:49



< Password di ripristino del regi...


1

Dopo aver inserito la password errata nell'interfaccia di accesso, fare clic su [Accedi](#)




2

In qualsiasi posizione dell'interfaccia della richiesta di errore della password, utilizzare i tasti sinistro e destro del mouse per passare e fare clic continuamente (ciclo sinistro–destro–sinistro, ogni clic 6 volte)

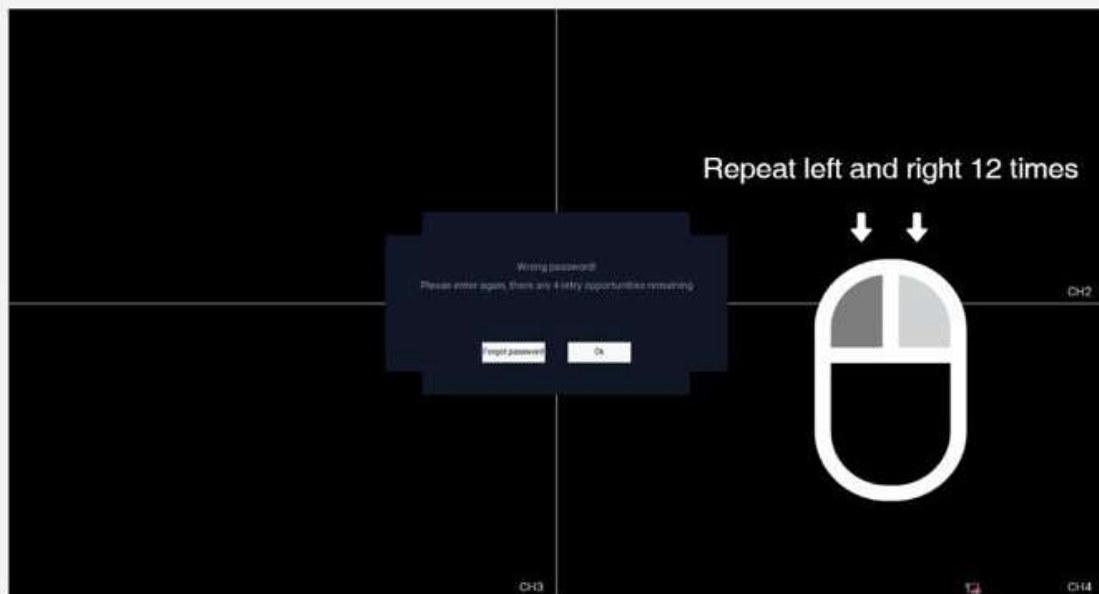

3

Dopo aver inserito una nuova password composta da 6–19 caratteri nella casella di reimpostazione della password visualizzata, la password può essere reimpostata correttamente.

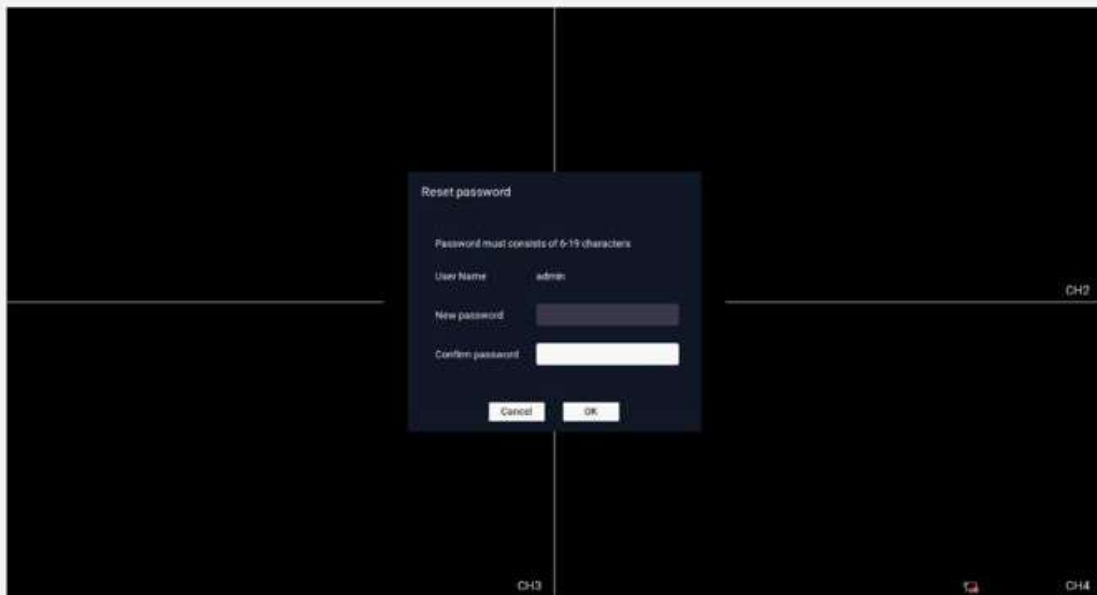

The image shows a 'Reset password' dialog box centered on a dark background. The dialog box has a title bar that says 'Reset password'. Below the title bar, it states 'Password must consists of 6-19 characters'. There are three input fields: 'User Name' with the value 'admin', 'New password' (which is currently empty and has a dark background), and 'Confirm password' (which is currently empty and has a light background). At the bottom of the dialog box, there are two buttons: 'Cancel' and 'OK'.

Reset password

Password must consists of 6-19 characters

User Name admin

New password

Confirm password

Cancel OK

CH2

CH3 CH4

E' possibile vedere la procedura tramite l'app EseeCloud seguendo le istruzioni che vengono fuori quando si clicca "Password scordarsi"

