
Outdoor CPE


Quick Installation Guide

Device Installtion

Passive PoE Adapter supports up to 60 meters (200 feet) Power over Ethernet deployment

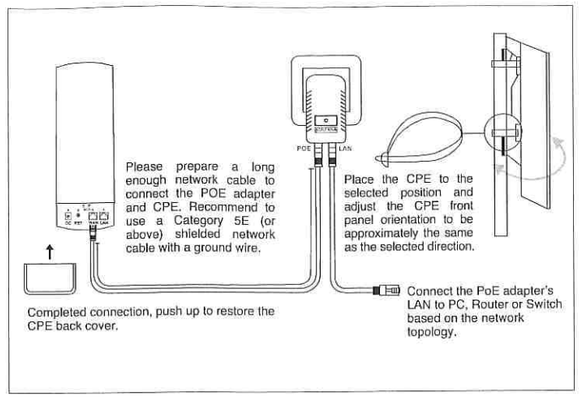


Wireless Connection Topology

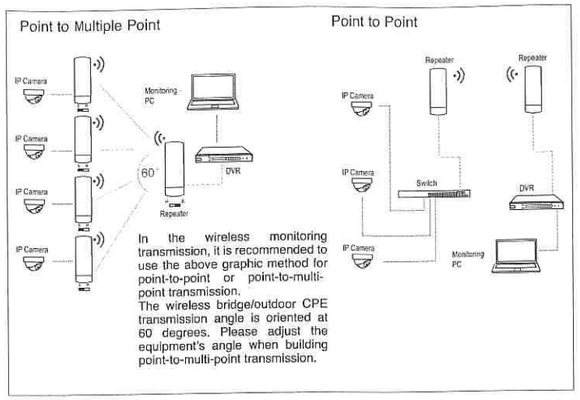


Quick Configuration (for models without LED Display)

1.Set working mode: Select M position for Master CPE. Select S position for Slave CPE

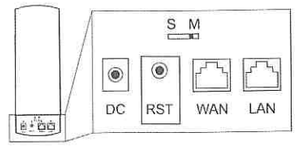

2.Start pairing process: press Reset button for about 1 second to start the pairing process for the Master and Slave CPEs. Pairing of 1 Master to 1 Slave, or 1 Master to multiple Slaves follows the same process.

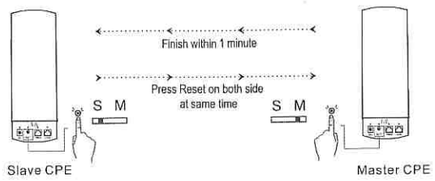


Notice: The bridging process of the Master and Slave CPEs should be finished in 1 minute.

WEB Configuration


1. PC configuration if PC connect CPE by wireless

Connect to CPE's wireless SSID: Wireless 2.4G_XXXXXX/Wireless 5.8G/Wireless 5.8G_XXXXXX, wireless key: 66666666.
Set PC wireless network IP to 192.168.188.x(x: 11-200), same network segment as CPE, subnet mask: 255.255.255.0

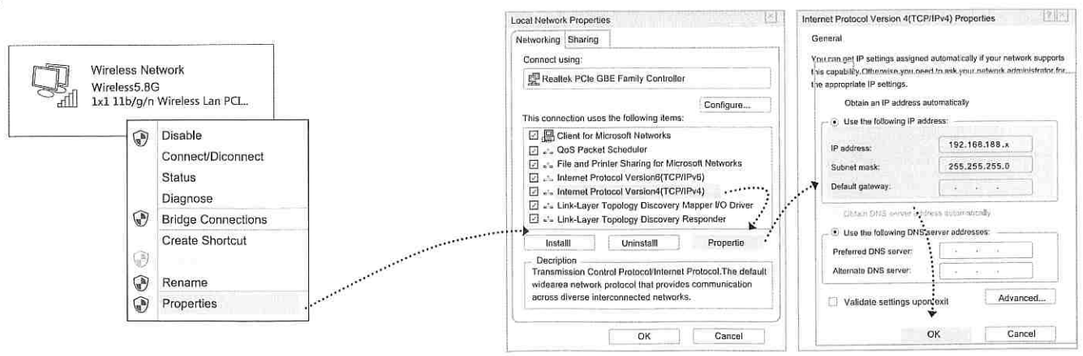

2. PC configuration if PC connect CPE wired

If connect PC and CPE wired, Set PC local network IP to 192.168.188.x(x: 11-200), same network segment as CPE, subnet mask: 255.255.255.0:

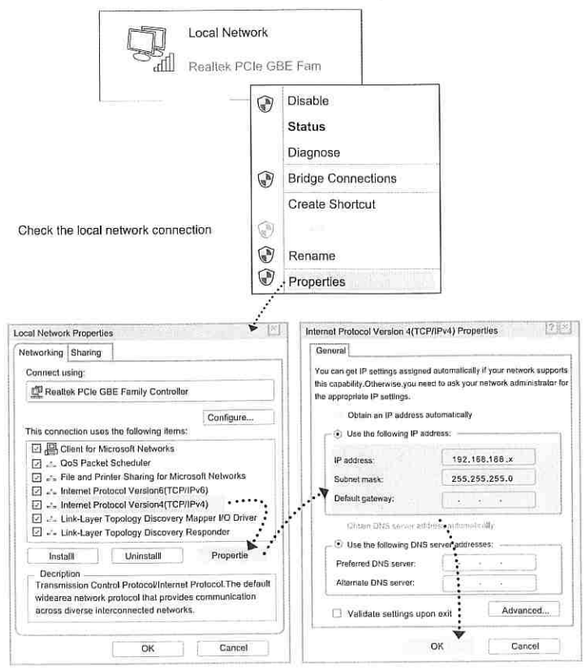

Set Static IP address for PC

3. Login Web Configuration

Use IE browser to access http://192.168.188.253, pop up the login page shown below, input the login password: admin, enter into the home page.

